

Guide for replacement of FLXE shaft kit

更换配件指导---- FLXE 传动轴



Before replacement, must unplug of mixing machine.

先断开电源插头，再开始更换配件。

For safety, worker must wear gloves.

为确保安全，请操作人员全程佩戴手套。

1st step: Taking the cover of shaft apart, take the broken shaft apart,

第一步：拆卸左侧轴护板，拆卸传动轴总成；



2nd step: Install new transmission shaft, and cover of shaft.

第二步：安装新传动轴总成，安装轴护板；

